

ASSEMBLY INSTRUCTIONS FOR DL800

January 2013

The DL800 is a square format frameless upright glass cabinet with double hinged doors, adjustable shelves and no lights.

The box contains all the parts necessary for its assembly including tools and a parts diagram.

ASSEMBLY

Assembly of the DL800 is by way of poles, brackets, screws (nuts) and bolts.

The cabinet is assembled both horizontally and upright.

One person can assemble the cabinet, but it can be helpful to have a second person for various tasks.

It is easier to clean the glass before the cabinet is assembled.


Occasionally, the parts diagram may differ from the contents of the box. Design improvements mean that your cabinet may differ in certain respects from what is described in these instructions.

1. After unpacking the boxes, place the base board on the ground. The base board has four plastic feet on the bottom. If you have ordered wheels, screw these into the white plugs in the predrilled holes under the base. In general, two wheels are swivel-style and two are fixed, although sometimes all four wheels may be swivel-style – the swivel-style wheels have a wider base than the fixed-style.
2. The cabinet is mainly held together by the four poles supplied. In combination with the glass sides, these poles give the cabinet structural integrity. They also support (carry) the shelves. Four poles have been supplied – in the model without lights, all four of these poles are plain, i.e. they have no light fittings on them.
3. Install the poles first. The poles should be inserted through the holes in the base, and secured with the large bolts supplied. Usually, the base has been designed in such a way that these poles do not go right through to the bottom of the base, but sit on a false bottom. Hold these poles in place by screwing the supplied large screws into the bottom of the poles as far as they will go. This can usually be done by hand, but a spanner is supplied to assist if required. Remember to use a washer. The screw will look something like the one in Photo 1, although it may not have the hole in the top.
NOTE: Both ends of the poles are identical. There is no right side up.
NOTE: Design changes mean that some or even all of the poles may use nuts instead of bolts. Regardless, fix the poles to the base as seems appropriate.



SHOWCASESDIRECT
design strength value

Ph: 027 2937193
Fax: (09) 6290900
Email: info@showcasesdirect.co.nz
www.showcasesdirect.co.nz

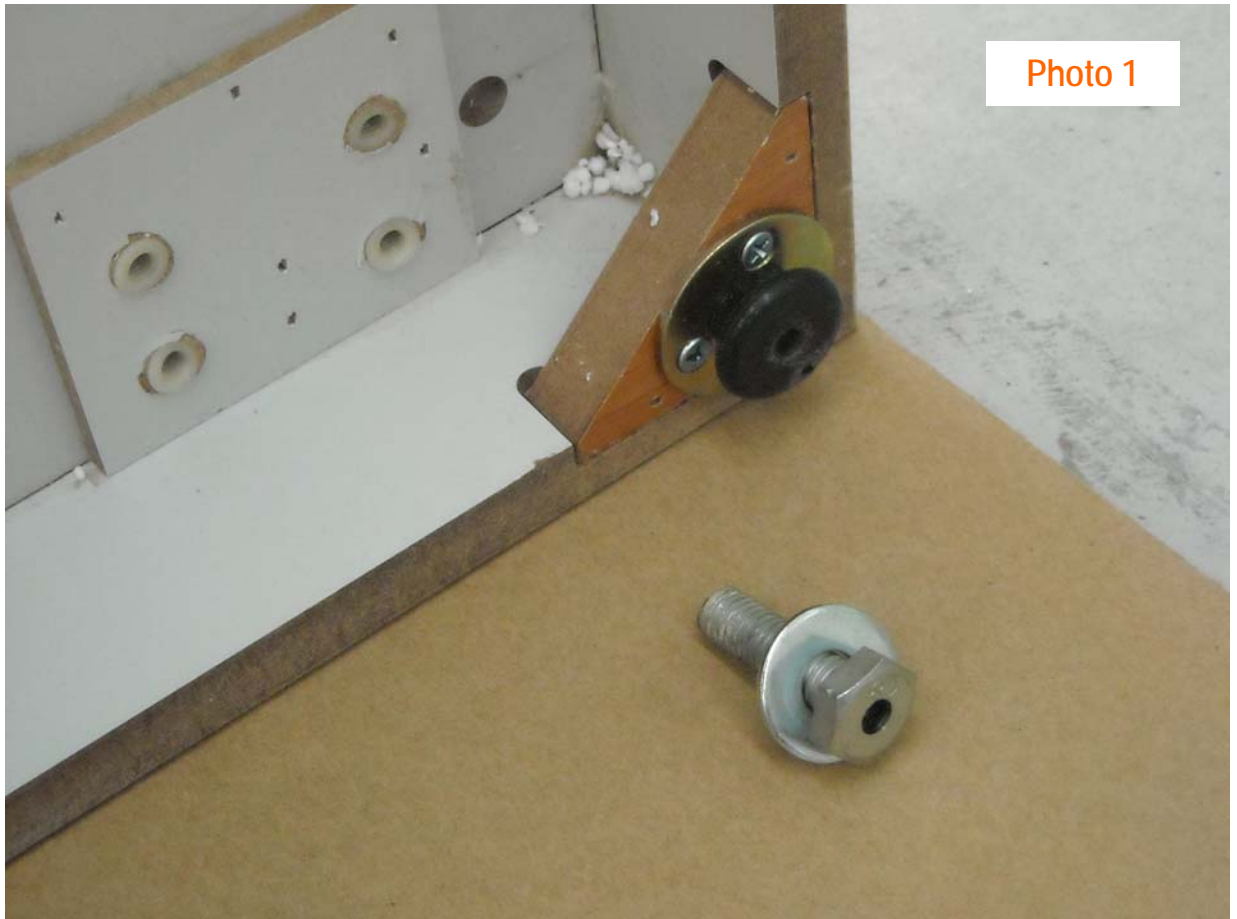

4. After all four poles have been secured in place, place the cabinet upright, take the back glass panel (the largest of the glass panels), and place it in the appropriate slot on the base board. There is no right side up. The back panel can also be identified as having one hole in the middle of each of its long sides, as opposed to a hole on just one side.
5. Place one of the side panels into its slot on the base board, making sure that the hole on the long side of the panel corresponds to the hole on the back panel. Fasten the two panels together through the holes using an L bracket and two screws (Photo 2). Repeat this process with the second side panel.



SHOWCASESDIRECT
design strength value

Ph: 027 2937193
Fax: (09) 6290900
Email: info@showcasesdirect.co.nz
www.showcasesdirect.co.nz

Photo 2



6. Once the basic structure of the cabinet is in place, the shelf supports and flanges can be threaded on to the rear poles. The flanges are designed to cover the hole that the poles go through – see Photo 3. The shelf supports are placed onto the pole with the grubber screw (the screw that holds the shelf firm in its slot) facing down. Each pole will have one flange (which goes on first), followed by four shelf supports, and another flange facing upwards.



SHOWCASESDIRECT
design strength value

Ph: 027 2937193
Fax: (09) 6290900
Email: info@showcasesdirect.co.nz
www.showcasesdirect.co.nz

Photo 3

Thread equal numbers of shelf supports on to each pole.


The flange will look like this when the cabinet is completed.



SHOWCASESDIRECT
design strength value

Ph: 027 2937193
Fax: (09) 6290900
Email: info@showcasesdirect.co.nz
www.showcasesdirect.co.nz

7. Once the poles, the sides and the shelf supports have been put in place, the top can be fixed in place. The top is fixed to the poles, not the side glass, by using the shorter of the bolts supplied. These screws screw through the top board and into the top of the poles. The top only goes on one way because the glass must sit into the routed grooves. Because the doors have yet to be hung, it is good practice to leave the top bolts a little loose so the top can be lifted in order to fit the doors.
8. Fit the doors. The hinges supplied have two screws on one side, and double sided adhesive foam on the other. The screws are designed to face the back of the cabinet once the doors are in place, so they must be fitted in pairs to achieve this effect. It is not recommended to have the screws facing outwards, where they can be seen. Remove the yellow (or white) waxed paper from the adhesive foam which is already in place on the inside of the hinge. Place the hinge on a corner of one of the doors, and allow the adhesive foam to hold it in place. The doors and hinges are designed to have approximately 1mm margin between the edge of the hinge and the edge of the door. See Photo 4. Place one of the supplied pieces of flat metal between the screws on the other side of the hinge and the glass i.e. **DO NOT SCREW DIRECTLY ONTO THE GLASS OR YOU RISK BREAKING IT.** In no circumstances should the screws make contact with the glass. Tighten the screws in tandem until they hold the hinge in place - the screws should be tightened reasonable firmly.

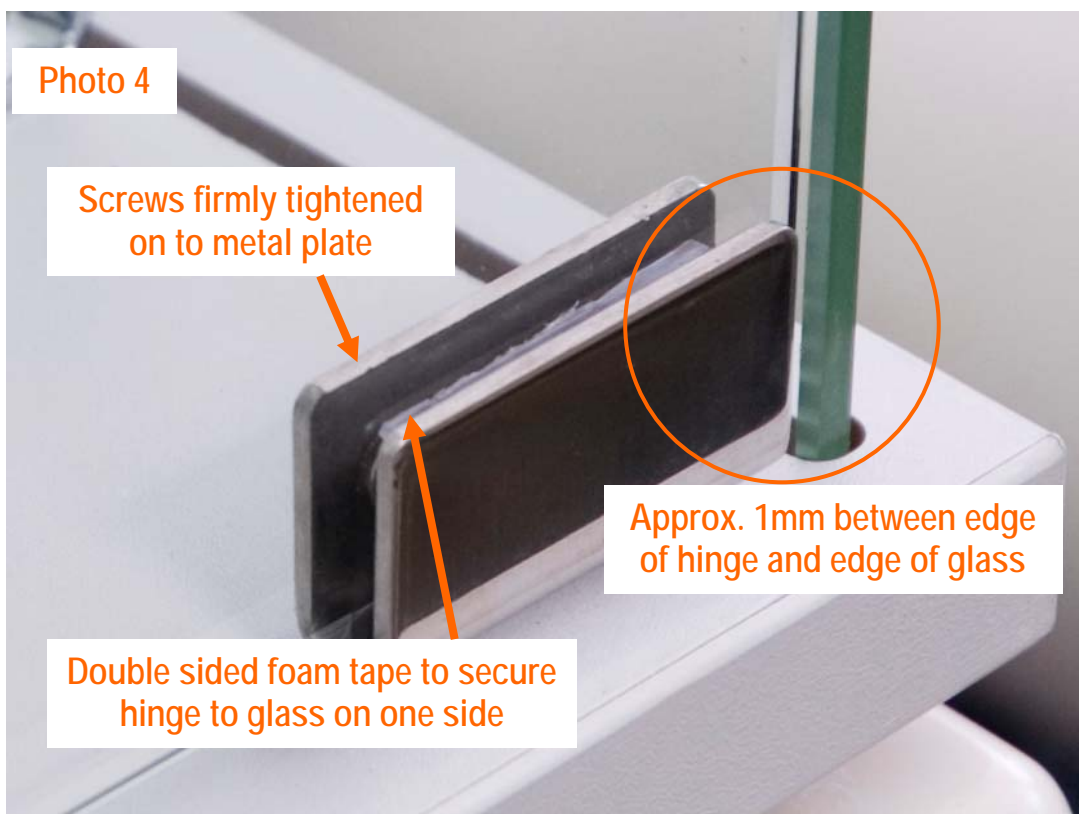


9. Repeat this process for the other hinge, and the other door, ensuring the hinges are placed as pairs with the screws facing the same way.
10. Place a door with the hinges attached in the relevant holes in the base, and lift the top until you can put the door into the corresponding hole in the top. You may have to temporarily loosen the top nuts and bolts in order to be able to do this. Repeat for the second door.
11. Place the lock in the appropriate position on each door, and tighten with the supplied screwdriver. See Photo 5.



12. Put the shelves in place. You can place the shelves at any height, as they are fully adjustable. The important thing is to ensure that each of the four shelf supports are at exactly the same height so that the shelf is level. This involves measuring the height of shelf support as you position them. Start with the bottom shelf and work your way up. Tighten the shelf supports into place with the small Phillips screw driver supplied – the small screws should be fastened securely onto the pole. Place each shelf into the shelf supports in turn. Once in place, the black grubber screws (in the bottom of the shelf supports) should be tightened to ensure the shelves do not slide out of the supports (Photo 6).



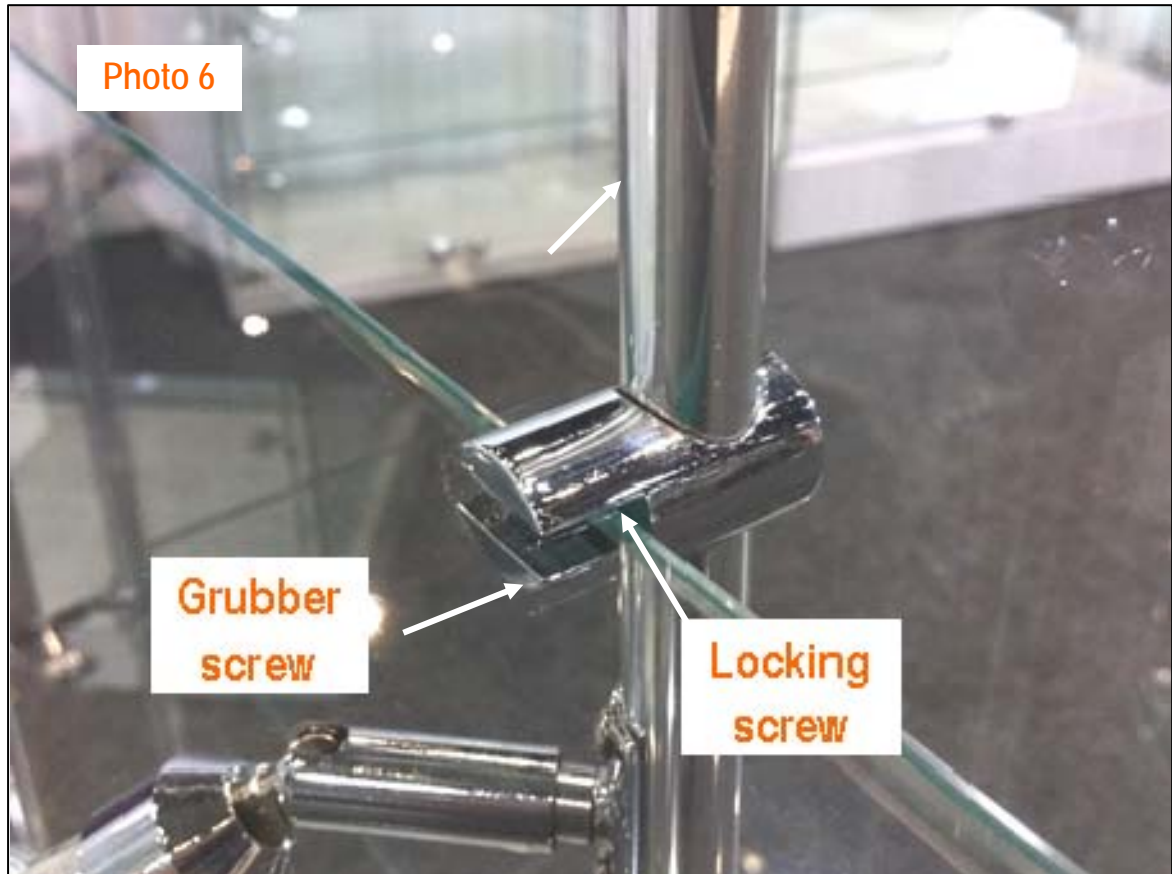

13. If they are not pre-fitted, screw the door stoppers into the pre-drilled holes in the base and/or the top.



SHOWCASESDIRECT
design strength value

Ph: 027 2937193
Fax: (09) 6290900
Email: info@showcasesdirect.co.nz
www.showcasesdirect.co.nz



This picture shows the DL800LS – the model with the lights. The DL800 looks exactly the same but without the lights.



SHOWCASESDIRECT
design strength value

Ph: 027 2937193
Fax: (09) 6290900
Email: info@showcasesdirect.co.nz
www.showcasesdirect.co.nz